

## **Compositions for Chemical Mechanical Planarization Of Copper**

Robert J. Small  
Maria Peterson  
Tuan Truong  
Melvin K. Carter  
Lily Yao

### **BACKGROUND**

#### **Field of the invention**

[0001] The present invention relates generally to compositions for chemical mechanical planarization, particularly to compositions for chemical mechanical planarization of copper, tantalum and tantalum nitride layers as occur in the manufacture of integrated circuits.

#### **Description of related art**

[0002] Modern integrated circuits typically comprise millions of active devices on a single substrate, electrically interconnected through the use of single and multilevel interconnections including conductive lines and plugs ("vias"). Conventionally, integrated circuits include a semiconductor substrate and a plurality of sequentially formed dielectric layers and conductive patterns, including conductive lines, vias and interconnects. Typically, the conductive patterns on different layers, i.e. upper and lower layers, are electrically connected by a conductive interconnect or plug filling a via opening through the interlayer dielectric ("ILD"), while a conductive plug filling a contact opening establishes electrical contact with an active region on a semiconductor substrate, such as a source/drain region. As is known in the art, a damascene technique can be employed to form interconnects by forming an opening or channel in the ILD and filling the opening with a conductive material, typically a metal. The metal typically fills the channel in the ILD and covers the field region atop the ILD between channels. Planarization typically is the next step, removing the metal in the field region, removing barrier/adhesion layers (if any), and providing a substantially planar surface for further coating and patterning.

[0003] A dual damascene technique is also known in the art and can be employed to form conductive plugs and lines simultaneously. Basically, dual damascene involves forming an

opening comprising a lower contact or via opening section in communication with an upper channel section, and filling the opening and channel section with a conductive material, typically a metal, to simultaneously form an electrically connected conductive plug and channel combination. Planarization follows, to remove metal and other materials as in the damascene technique.

[0004] Elemental aluminum and its alloys have been traditionally employed for filling metallic channels and vias in the fabrication of integrated circuits having relatively low integration density. The advantages of aluminum include its low resistivity, superior adhesion to typical dielectric layers (*e. g.* SiO<sub>2</sub>), ease of patterning, and high purity.

[0005] However, aluminum and aluminum alloys are susceptible to detrimental increases in contact resistances during high temperature processing. Another problem associated with the use of aluminum and aluminum alloys in integrated circuits is electromigration, which becomes a more serious concern as the level of integration and the density of components increase. The higher number of circuit components in very large-scale integration ("VLSI"), ultra large-scale integration, ("ULSI") and even higher densities, requires the use of conductive interconnects with smaller cross sections. This causes higher electrical resistance in the interconnect and increased heat-generation. Accordingly, as integrated circuit patterning schemes continue to miniaturize to submicron dimensions, aluminum based metallurgies have become increasingly marginal for handling the increased circuit speed and current density requirements. Materials having higher conductivity than aluminum or its alloys would be advantageous for use as interconnects. Hence, the escalating requirements for high density and performance associated with VLSI, ULSI and beyond require responsive changes in multilevel interconnection technology.

[0006] Currently, copper and copper alloys are receiving considerable attention as replacement materials for, *inter alia*, aluminum and aluminum alloys in VLSI and ULSI multilevel metallization systems. Copper has a lower resistivity than aluminum, and also significantly higher resistance to electromigration. However, problems with integrating copper metal into multilevel metallization systems include the difficulty of etching copper and its relatively high diffusivity. Since copper is difficult to pattern precisely and economically, damascene or dual damascene processing is typically preferred over subtractive patterning processes for creating copper interconnections. To hinder copper diffusion and to enhance its adhesion,

barrier/adhesion layers (typically Ta/TaN) are used to separate the copper interconnections from the surrounding dielectric and to enhance the adhesion of the copper. However, these multicomponent layered structures of Cu/Ta/TaN/ILD exacerbate the problems of providing smooth surfaces for accurate patterning, while accurate patterning is increasingly necessary for providing reliable electrical contact to submicron features.

[0007] Chemical Mechanical Planarization (also referred to as Chemical Mechanical Polishing), or CMP, is the process of removing material and forming a substantially planar layer before additional layers are deposited and/or additional patterning occurs. CMP of copper and copper alloys deposited on a tantalum (Ta) and/or tantalum nitride (Ta<sub>N</sub>) barrier/adhesion layer has become the subject of considerable interest. For economy of language, we refer to copper and/or copper alloys as “copper” and barrier/adhesion layer(s) as “barrier layer,” understanding thereby that the copper conductor may include copper alloys (among other materials) and the barrier layer may have adhesive as well as barrier functions.

[0008] Slurries previously employed in the CMP processes of copper and/or barrier layers have suffered from several disadvantages, including an inadequate selectivity between removal rates of copper and barrier material. The selectivity in the removal of copper and barrier materials should be neither too high nor too low. Uncontrollable removal rates can be the undesirable result. Over-polishing of some materials in order to remove other materials may also occur when selectivity is too high. Over-polishing can lead to significant degradation, dishing or erosion of the surface being over-polished and consequently poor planarization.

[0009] Furthermore, current polishing slurries employed in these CMP processes have suffered from poor within-wafer-nonuniformity values. Within-wafer-nonuniformity is a known way to quantify the uniformity of material removal rate on many points over a wafer. For example, pre-CMP thickness measurements are typically taken by measuring forty-nine points on each wafer and then post-CMP thickness measurements are taken at the same points. Within-wafer-nonuniformity is then calculated from the following formula:

$$\text{Within-wafer-nonuniformity ("WIWNU")} \% = 100 [\sigma(\Delta_i)/\text{ave}(\Delta_i)] \quad \text{Eq. 1.}$$

where  $\Delta_i$  = thickness of the material removed from point  $i$  on the wafer;

$\sigma(\Delta_i)$  = standard deviation of all  $\Delta_i$  values on the wafer; and

ave ( $\Delta_i$ ) = mean of all  $\Delta_i$  values on the wafer.

[0010] The set of  $\Delta_i$ 's are equal to the thickness removed or the pre-CMP thickness minus the post-CMP thickness for each of the measured points,  $i$ . Typically, good within-wafer-nonuniformity values are less than about 5%.

[0011] For the foregoing reasons, among others, there is a need for CMP slurry compositions that, *inter alia*, planarize or polish copper and/or Ta and/or TaN barrier layers at desirable high polishing rates while minimizing surface imperfections, defects, corrosion, dishing and erosion. Particularly, there is a need for one or more CMP slurry compositions that provide good selectivity between copper and barrier removal rates while providing good within-wafer-nonuniformity values. Additionally, there is a need for one or more CMP slurry compositions that provide a high copper removal rate and a low Ta and/or TaN barrier removal rate while avoiding significant degradation, dishing or erosion. Thus, ideally, there is a need for, *inter alia*, a "phase-one" or a first chemical mechanical planarization or polishing slurry for use in connection with copper damascene or dual damascene processes that removes the copper from the field region between the copper-containing interconnects and stops planarizing when the barrier layer is reached. We refer to wafers having copper deposited thereon as in a damascene or dual damascene process as "copper wafers," understanding that excess field region copper is to be removed by the CMP process. Following removal of the field region copper and exposure of the barrier layer in the phase-one CMP process, the barrier layer is then removed to complete the planarization. Different processing conditions and/or different CMP compositions are typically employed for the removal of the barrier layer.

[0012] We consider two general classes of CMP processes for the polishing of copper wafers. The first process employs a copper single-step slurry process involving a single chemical composition of the CMP slurry throughout the planarization that removes both the copper and barrier materials. This first CMP process is typically continuous, but polishing steps can be divided into as many sub-steps as needed by varying polishing pressure, speeds and other processing parameters. In general, a CMP processing step employing high polishing pressure can remove copper topography and planarize the surface efficiently with good removal uniformity. Subsequently, a step is employed using lower polishing pressure to remove the remaining copper substantially uniformly and continuing to remove barrier layer (tantalum/tantalum nitride or tungsten (W), among others) with a lower removal rate.

[0013] The second general class of CMP processes involves a phase-one and phase-two copper CMP process comprised of two separate polishing steps using two separate polishing slurry compositions. Phase-one slurry (or the first CMP step), typically containing oxidizer and abrasive, is designed to planarize copper topography quickly and then continue to remove the copper metal while maintaining good uniformity to the barrier layer. In the phase-two step, a slurry with an oxidizer is typically used to remove the barrier layer (TaN and/or Ta).

[0014] The present invention is directed to a phase-one or a first chemical mechanical planarization or polishing slurry that is able to selectively polish the copper portion of a copper wafer having a tantalum and/or tantalum nitride layer. Embodiments of the present invention include CMP compositions that polish both copper and barrier layers (under different polishing conditions) as well as compositions that polish only copper.

## SUMMARY

[0015] The present invention relates generally to compositions for chemical mechanical planarization ("CMP") of copper surfaces and particularly to the CMP of multicomponent layered structures including Cu, typically overlying Ta/TaN barrier/adhesion layers on a dielectric material. Previously CMP slurries suffered from several disadvantages, including inadequate selectivity between copper and barrier layer removal, poor within-wafer-nonuniformity, degradation, dishing or erosion of the surface. The present invention relates to a "phase-one" CMP slurry that removes copper from the field region between the copper-containing interconnects and stops planarizing when the barrier layer is reached. In some embodiments of the present invention, the CMP slurry includes an oxidizer, one or more hydroxylamine compounds and at least one abrasive.

[0016] The hydroxylamine compositions include, in some embodiments of the present invention, the mild oxidizing agent hydroxylamine nitrate that includes a nitrate anion providing good removal rate controllability of the tantalum and/or tantalum nitride barrier underlying the copper. Other embodiments include hydroxylamine, hydroxylamine sulfate, hydroxyl ammonium salts and mixtures thereof.

[0017] Additionally, pursuant to some embodiments of the present invention, the oxidizers may further include citric acid as a complexing agent for copper. Sulfuric acid and/or nitric acid provide means for modifying the pH of the oxidizer so that the hydroxylamine chemistries are on the acidic side and are therefore oxidizers. Other acids that can be used include acetic acid, and/or perchloric acid.

[0018] Some embodiments of the present invention, include corrosion inhibitors such as benzotriazole, 2,4-pentadione dioxime and/or 1,6-dioxaspiro[4,4] nonane 2,7-dione. Some embodiments of the present invention also include a free radical inhibitor, advantageously hydrazine or one or more hydrazine salts (for example, nitrate, sulfate, chloride, among others). Colloidal silica and milled alumina are used as abrasive components pursuant to some embodiments of the present invention.

## DESCRIPTION OF THE DRAWINGS

Figure 1: Graphical depiction of etching rates or removal rates for various processes described herein.

Figure 1: Graphical depiction of etching rates or removal rates for various processes described herein.

## DETAILED DESCRIPTION

[0019] The present invention ameliorates or overcomes one or more of the shortcomings of the prior art by providing CMP slurry compositions that have one or more of the following characteristics: 1) an improved copper/barrier selectivity; 2) an ability to planarize the copper portion of a copper and tantalum and/or a tantalum nitride layer at desired high planarization rates while reducing copper dishing and erosion; and 3) good within-wafer-nonuniformity values.

[0020] In some embodiments, the present invention provides a phase-one or first chemical mechanical planarization slurry that is able to selectively planarize the copper portion of a copper and tantalum and/or a tantalum nitride layer. In some embodiments of the present invention, the phase-one or first chemical mechanical planarization slurry includes an oxidizer, one or more hydroxylamine compounds and at least one abrasive.

[0021] One of the hydroxylamine compositions pursuant to some embodiments of the present invention is hydroxylamine nitrate ( $\text{NH}_2\text{OH}\cdot\text{HNO}_3$ , "HAN"). HAN serves as a mild oxidizing agent, having a pH of about 3 to about 3.5 and includes a nitrate anion that provides good removal rate controllability of the tantalum and/or tantalum nitride barrier underlying the copper.

Hence, one advantage of hydroxylamine nitrate over the known prior art is that it has better removal rate controllability as compared with hydrogen peroxide. The chemical activity of HAN can be shifted by changing the pH without seriously compromising the stability, which is an advantage over many other oxidizers ( $\text{H}_2\text{O}_2$ , ammonium persulfate, among others).

[0022] Another hydroxylamine composition pursuant to some embodiments of the present invention is hydroxylamine ( $\text{NH}_2\text{OH}$ ). Hydroxylamine can be employed as an oxidizing agent and its pH may be adjusted from about 9 to a value in the acidic range ( $<7$ ) by adding various types of acids such as nitric or sulfuric acid.

[0023] A further hydroxylamine composition pursuant to some embodiments of the present invention is hydroxylamine sulfate  $[(\text{NH}_2\text{OH})_2\cdot\text{H}_2\text{SO}_4]$ , "HAS". Pursuant to some embodiments of the present invention, hydroxylamine sulfate is employed to control the rate at which the barrier layer is exposed and polished through. Thus, some embodiments of the present invention strike a balance between HAN and HAS to obtain peak performance, i.e., to obtain an advantageous barrier removal rate. Thus, pursuant to some embodiments of the present



invention, HAS provides one technique for introducing an additional oxidizing agent into the slurry while controlling the concentration or availability of the anions, whether nitrate or sulfate.

[0024] A surprising phenomenon was discovered in connection with the use of the hydroxylamine compounds as a component for copper planarization. Normally, copper film in the presence of a solution having a very low pH is easily dissolved off of the surface as long as an oxidizer is supplied to the dissolving film such that removal occurs more by means of a chemical effect rather than a mechanical polishing effect. In contrast, and surprisingly, hydroxylamine-based chemistries do not seem to exhibit the same phenomenon. A low pH does not demonstrate a high copper removal rate and, as the pH increases (but remains acidic) the copper removal rate increases. This is counter intuitive because, as the pH increases and approaches a pH of 5 or 6, the copper oxides (copper I and copper II) become harder. Thus, one would predict that these harder oxides of copper would be more protective against etch. However, chemical etching by hydroxylamines is seen to increase with increasing pH despite the presence of such oxides.

[0025] Additionally, pursuant to some embodiments of the present invention, the oxidizers can further include citric acid and/or sulfuric acid. Citric acid functions as a complexing agent for copper, helping to retain copper in the form of a complex so as to preclude copper from redepositing on the wafer surface or from coming out of solution because of other secondary chemical reactions. Sulfuric acid and/or nitric acid provide means for modifying the pH of the oxidizer so that the hydroxylamine chemistries are on the acidic side and are therefore oxidizers. Other acids that can be used include acetic acid, and/or perchloric acid.

[0026] Furthermore, and pursuant to some embodiments of the present invention, the oxidizers can include benzotriazole ( $C_6H_4NHN_2$ , "BTA"). Benzotriazole is typically employed as a corrosion inhibitor for controlling the chemical etching of copper. Moreover, and pursuant to some embodiments of the present invention, the benzotriazole can be replaced with 2,4-pentadione dioxime and/or 1,6-dioxaspiro[4,4] nonane 2,7-dione wholly or in part.

[0027] The oxidizers, according to some embodiments of the present invention, can also include a free radical inhibitor (or quencher), advantageously hydrazine or derivatives thereof. Examples of free radical inhibitors include hydrazine and hydrazine salts (for example, nitrate, sulfate, chloride, among others). Some oxidation reactions that occur during CMP may take a

pathway generating free radical reaction products which tends to be disadvantageous to the CMP process because free radicals can reduce the concentration of the necessary active CMP polishing reagents and possibly form undesirable by-products. Thus, free radical inhibitors are advantageously included in some embodiments of the present invention to avoid such drawbacks.

[0028] CMP slurry compositions for copper are delineated in detail in the following examples. In all such examples, numerical values for concentrations, amounts, pH and the like are approximate unless specifically stated to be precise.

### **Copper phase-one CMP Slurry compositions**

[0029] In some embodiments, the present invention includes an oxidizer and an abrasive composition.

### **Oxidizers**

#### **Oxidizer Components ("Oxidizer A")**

[0030] One oxidizer ("Oxidizer A") pursuant to some embodiments of the present invention includes hydroxylamine and hydroxylamine nitrate in aqueous solution (advantageously in distilled or de-ionized water, referred to collectively herein as "DI" water) in sufficient concentrations to perform CMP. Typical concentration ranges for the components are as follows: approximately 0.3% to approximately 10% by weight hydroxylamine, and approximately 0.1% to approximately 3% by weight hydroxylamine nitrate, in aqueous solution. For economy of expression we describe the above approximate concentration ranges symbolically as: hydroxylamine (~0.3% - ~10%), hydroxylamine nitrate (~0.1% - ~3%). One example of component concentrations for Oxidizer A is given in Table A<sub>x</sub>.

**Table A<sub>x</sub>**

Typical composition for Oxidizer A:

<b>Component</b>	<b>Component Concentration (Approximate Weight Percents)</b>
Hydroxylamine	3.5%
Hydroxylamine Nitrate	2.5%
DI water	94%

pH Range

[0031] Oxidizer A is advantageously adjusted to have a pH range from about 6.6 to about 6.8 by the addition of an appropriate amount of acid as described above.

Oxidizer Components (“Oxidizer B”)

[0032] Another oxidizer (“Oxidizer B”) pursuant to some embodiments of the present invention includes hydroxylamine, hydroxylamine nitrate, hydroxylamine sulfate, and DI water in sufficient concentrations to perform CMP. Typical concentration ranges are as follows: Hydroxylamine (~0.3% - ~10%), hydroxylamine nitrate (~0.1% - ~3%), hydroxylamine sulfate (~0.001% - ~12%). One example of approximate component concentrations for Oxidizer B is shown in Table B<sub>x</sub>.

**Table B<sub>x</sub>**

Typical composition for Oxidizer B:

<b>Component</b>	<b>Component Concentration (Approximate Weight Percent)</b>
Hydroxylamine	3.5%
Hydroxylamine Nitrate	0.82%
Hydroxylamine Sulfate	3.0%
DI water	92.68%

pH Range


**[0033]** Oxidizer B is advantageously adjusted to have a pH range from about 6.7 to about 6.8 by the addition of an appropriate amount of acid as described above.

**[0034]** It is advantageous in some embodiments of the present invention to include in the oxidizer formulations various additives (“agents”) that form copper complexes. In particular, some embodiments include copper complexing agents that result in water-soluble copper complexes, tending to facilitate thereby the CMP of copper. Chelating agents, such as citric acid, are one class of copper complexing agents forming soluble complexes. For economy of language, we denote by “Soluble Complexing Agents” those chemical species that form complexes with copper wherein such complexes are soluble in aqueous solution. In practice, the use of such Soluble Complexing Agents does not lead to the formation of precipitates or films of copper complex. Citric acid is one example of a Soluble Complexing Agent. Other examples include, but are not limited to, copper-complexing catechol derivatives, copper-complexing alpha hydroxy organic acids (for example, lactic acid among others typically having molecular weights less than about 150), copper-complexing hydroxamic acids, copper-complexing amino acids (typically having molecular weights less than about 150), copper-complexing dicarboxylic acids that can typically form rings that include copper ion(s) such that the rings are typically 5-, 6-, or

7- member rings and have molecular weights typically less than about 175.

[0035] Soluble Complexing Agents should be contrasted with “Insoluble Complexing Agents” that lead to insoluble complexes of copper, typically deposited as a film on the surface undergoing planarization. Examples of Insoluble Complexing Agents include benzotriazole (“BTA”), 1,6-dioxaspirol [4,4] nonane 2,7-dione (“DND”) and various dioximes as depicted in Structure 1.

[0036] Structure 1.

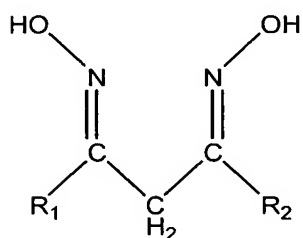

In Structure 1, dioximes  $\text{R}_1$ ,  $\text{R}_2 = \text{H}$ ,  $\text{C}_1 - \text{C}_4$  aliphatic hydrocarbons. When  $\text{R}_1 = \text{R}_2 = \text{CH}_3$ , Structure 1 is 2,4 pentadione dioxime. 2,4 pentadione dioxime (“PDO”) is advantageously used in some embodiments of the present invention, although other dioximes as depicted in Structure 1 are included as well.

[0037] In further embodiments of the present invention, Insoluble Complexing Agents, typically BTA, PDO, DND or mixtures thereof, are used to block the surface of copper from corroding or dissolving away in the absence of an oxidizer, or corroding or dissolving away at a controlled rate in the presence of an oxidizer.

[0038] BTA typically forms a mono layer in the form of a cover salt, i.e., a copper reaction product. The cover salt is substantially insoluble and, thus, makes the copper basically insoluble at its surface. The cover salt can be removed under extreme chemical conditions that include the use of strong acids or bases. The cover salt can also be physically removed by the mechanically abrasive component of the CMP process. However, the cover salt reforms and blocks the removal of copper from the surface in the absence of the CMP process. Thus, the presence of BTA and other Insoluble Complexing Agents form blocking compounds and hinder the copper corrosion or dissolution from the surface

[0039] However, BTA has the disadvantage that it stack-crystallizes further BTA on top of the protective monolayer on the copper surface. The presence of these additional crystalline layers can too strongly prevent copper removal. Furthermore, these crystalline layers typically contain BTA crystals having sharp edges which, during mechanical abrasion of normal CMP processing, may physically scratch the wafer.

[0040] 2,4-Pentadione dioxime also forms a protective copper reaction product with the copper film but only a monolayer is formed. Thus blocking is provided that is similar to that provided by BTA but without the dangers associated with the stacked crystal formation characteristic of BTA. That is, both form insoluble products at about the same rate and having about the same degree of insolubility. However, PDO can form insoluble products at pH levels as low as pH = 2 to 3. Thus, PDO forms complexes with copper without the occurrence of stack crystallizing further layers on the initial monolayer.

[0041] In accordance with some embodiments of the present invention, the CMP polishing slurry can include one or more Insoluble Complexing Agents such as PDO.

#### Oxidizer Components ("Oxidizer C")

[0042] Another oxidizer ("Oxidizer C") according to some embodiments of the present invention includes hydroxylamine, hydroxylamine sulfate, a Soluble Complexing Agent, sulfuric acid, DI water, and benzotriazole. One example of approximate component concentrations for Oxidizer C is shown in Table C<sub>x</sub>.

**Table C<sub>x</sub>**

Typical composition for Oxidizer C:

<b>Component</b>	<b>Component Concentration (Approximate Weight Percent)</b>
Hydroxylamine	2.0%
Hydroxylamine Sulfate (solid)	3.0%
Citric acid (solid)	0.2%
Sulfuric acid H <sub>2</sub> SO <sub>4</sub> (@ 95-98% acid)	2.7-2.8%
DI water	Sufficient to make 100%
Benzotriazole	0.025%

pH Range

[0043] Oxidizer C is advantageously adjusted to have a pH range from about 2.9 to about 3.1 by the addition of an appropriate amount of acid as described above.

Oxidizer Components ("Oxidizer D")

[0044] Another oxidizer ("Oxidizer D") according to some embodiments of the present invention includes DI water containing dissolved therein hydroxylamine and ammonium salts, including but not limited to nitrate, sulfate, phosphate and chloride. Nitrate and sulfate are more advantageous due to favorable solubility and corrosion properties (either as solids or as solutions). One example of approximate component concentrations for Oxidizer D is shown in Table D<sub>x</sub>.

**Table D<sub>x</sub>**

Typical composition for Oxidizer D:

<b>Component</b>	<b>Component Concentration (Approximate Weight Percent)</b>
Hydroxylamine	2.0%
Ammonium salt	3.0%
DI Water	Sufficient to make 100%

pH Range

[0045] Oxidizer D is advantageously adjusted to have a pH range from about 2.7 to about 3.3 by the addition of an appropriate amount of acid as described above.

Oxidizer-Components (“Oxidizer-E”)

[0046] Another oxidizer (“Oxidizer E”) according to some embodiments of the present invention includes hydroxylamine, hydroxylamine sulfate, sulfuric acid, and DI water. One example of approximate component concentrations for Oxidizer E is shown in Table E<sub>x</sub>.



**Table E<sub>x</sub>**

Typical composition for Oxidizer E

<b>Component</b>	<b>Component Concentration (Approximate Weight Percent)</b>
Hydroxylamine	2.0%
Hydroxylamine Sulfate (solid)	3.0%
Sulfuric acid H <sub>2</sub> SO <sub>4</sub> (@ 95-98% acid)	2.7%
DI water	Sufficient to make 100%

pH Range

[0047] Oxidizer E is advantageously adjusted to have a pH range from about 3 to about 3.2 by the addition of an appropriate amount of acid as described above.

Oxidizer Components (“Oxidizer F”)

[0048] Another oxidizer (“Oxidizer F”) according to some embodiments of the present invention comprises hydroxylamine, hydroxylamine sulfate, sulfuric acid, and DI water. One example of approximate component concentrations for Oxidizer F is shown in Table F<sub>x</sub>.

**Table F<sub>x</sub>**

Typical composition for Oxidizer F:

<b>Component</b>	<b>Component Concentration (Approximate Weight Percent)</b>
Hydroxylamine	2.0%
Hydroxylamine Sulfate (solid)	3.0%
Sulfuric acid H <sub>2</sub> SO <sub>4</sub> (@ 95-98% acid)	2.7%
Citric acid (solid)	0.2%
DI water	Sufficient to make 100%

pH Range

[0049] Oxidizer F is advantageously adjusted to have a pH range from about 3 to about 3.2 by the addition of an appropriate amount of acid as described above.

Oxidizer Components ("Oxidizer G")

[0050] Another oxidizer ("Oxidizer G") according to some embodiments of the present invention includes hydroxylamine sulfate, hydroxylamine, sulfuric acid, hydrazine (NH<sub>2</sub>NH<sub>2</sub>), 4-hydrazine benzoic acid (solid), and DI water. One example of approximate component concentrations for Oxidizer G is shown in Table G<sub>x</sub>. Good results have been obtained with this particular example containing hydroxylamine.

**Table G<sub>x</sub>**

Typical composition for Oxidizer G:

<b>Component</b>	<b>Component Concentration (Approximate Weight Percent)</b>
Hydroxylamine Sulfate (solid) (HAS)	3.0%
Hydroxylamine (HDA)	2.4%
Sulfuric acid H <sub>2</sub> SO <sub>4</sub> (@ 95-98% acid)	4.2%
Hydrazine (99%) (NH <sub>2</sub> NH <sub>2</sub> )	0.2%
4-hydrazine benzoic acid (solid) (HBA)	0.03%

pH Range

**[0051]** Oxidizer G is advantageously adjusted to have a pH range from about 3.0 to about 3.4 by the addition of an appropriate amount of acid as described above.

Oxidizers Comprising A Free Radical Inhibitor

**[0052]** As mentioned above, the oxidizers in accordance with the present invention may further include a free radical inhibitor including hydrazine and hydrazine salts (for example, nitrate, sulfate, chloride, among others) whose function is to inhibit free radical formation during the polishing process.

Abrasives

Abrasive Components ("Abrasive A")

**[0053]** One abrasive ("Abrasive A") according to some embodiments of the present invention comprises colloidal silica. An example of Abrasive A is shown in the Table A<sub>a</sub>.

**Table A<sub>a</sub>**  
**Typical Composition for Abrasive A**

Type	Colloidal silica
Concentration (Weight % in DI water)	33.5-25%
Particle Size (range)	20-150 nanometers
Particle Size (average)	71-73 nanometers
Commercial Source	Dupont: DP106

[0054] In one embodiment, Abrasive A can be of the type which is manufactured by Dupont and sold under the name, DP 106 and further processed (milled and filtered) by EKC Technology, Inc. and sold thereby under the name, MicroPlanar™ CMP9000™. A Material Safety Data Sheet for this product is attached hereto (Attachment A) and incorporated herein in its entirety by this reference. The colloidal silica, in this example, has a particle size having a range between about 20 and 150 nanometers and includes an average particle size having a range between about 71 to 73 nanometers

#### pH Ranges

[0055] The normal pH range of the composition presented is from about 7.4 to about 8.5.

#### Abrasive Components ("Abrasive B")

[0056] Another abrasive composition ("Abrasive B") according to some embodiments of the present invention comprises milled alumina. One example of Abrasive B is shown in Table B<sub>a</sub>.

**Table B<sub>a</sub>**  
**Typical Composition for Abrasive B**

Type	Milled Alumina
Concentration Weight	20%
Particle Size (range)	20-250 nanometers
Particle Size (average)	90 nanometers
Source	Baikowski: CR-85

**[0057]** In one embodiment, the milled alumina can be of the type that is manufactured by Baikowski Chimie Co. of Annecy Cedex 9, France, sold under the name, CR-85. This product is processed further by EKC Technology, Inc. and sold thereby under the name, MicroPlanar™ CMP9001™. A Material Safety Data Sheet for this product is attached hereto (Attachment B) and incorporated herein in its entirety by this reference.

#### **pH Ranges**

**[0058]** The processed alumina has a general pH range from about 3.5 to about 5 and, advantageously, the pH is adjusted to lie in the range from about 4 to about 4.5. Adjustment of pH is typically performed by means of nitric acid optionally including aluminum nitrate.

#### **Copper CMP Slurry Compositions**

##### **Copper CMP Slurry Composition ("Slurry 1 Composition")**

**[0059]** Some embodiments of the present invention comprise Oxidizer A and Abrasive A mixed to form a Slurry 1 Composition. In one example, and according to some embodiments of the present invention, the mixing ratio, process and removal rate data for the Slurry 1 Composition is shown in the Table 1.

**Table 1**

Slurry 1 Composition: Mixing Ratio, Process and Removal Rate

Mixing Ratio	Process	Removal Rate (A/min)			
		Cu	WIWN U%	TaN	WIWNU %
10% of Abrasive A  90% of Oxidizer A	5/0/60/61	7202	6.2%	648	14.7%

[0060] In Table 1, the Slurry 1 Composition is comprised of 10% of Abrasive A and 90% of Oxidizer A. The process delineated with respect to the Slurry 1 Composition is achieved by applying 5 psi down force pressure, 0 psi back pressure, 60 rpm table speed (22.5 inch diameter) and 61 rpm carrier speed (8 inch diameter). The Slurry 1 Composition, when employed according to the above process, provides a Cu:TaN selectivity of approximately 11.1 (removal rate of Cu divided by the removal rate of TaN) and a copper within-wafer-nonuniformity (WIWNU%) of approximately 6.2%.

Cu Slurry Composition ("Slurry 2 Composition")

[0061] Other embodiments of the present invention include Oxidizer B and Abrasive A mixed to form a Slurry 2 Composition. In one example, and according to some embodiments of the present invention, the mixing ratio, process and removal rate data for the Slurry 2 Composition is shown in Table 2.

**Table 2**

Slurry 2 Composition: Mixing Ratio, Process and Removal Rate

Mixing Ratio	Process	Removal Rate (A/min)			
		Cu	WIWN U%	TaN	WIWNU %
10% of Abrasive A  90% of Oxidizer B	5/0/60/61	7113	5%	515	16%

[0062] In Table 2, the Slurry 2 Composition is comprised of 10% of Abrasive A and 90% of Oxidizer B. The process delineated with respect to the Slurry 2 Composition is achieved by applying 5 psi down force pressure, 0 psi back pressure, 60 rpm table speed (22.5 inch diameter) and 61 rpm carrier speed (8 inch diameter). The Slurry 2 Composition, when employed according to the above process, provides a Cu:Ta<sub>N</sub> selectivity of approximately 13.8 and a copper within-wafer-nonuniformity (WIWNU%) of approximately 5%.

Cu Slurry Composition ("Slurry 3 Composition")

[0063] Other embodiments of the present invention include Oxidizer C and Abrasive B mixed to form a Slurry 3 Composition. In one example, and according to some embodiments of the present invention, the mixing ratio, process and removal rate data for the Slurry 3 Composition is shown in Table 3.

**Table 3**

**Slurry 3 Composition: Mixing Ratio, Process and Removal Rate**

<b>Mixing Ratio</b>	<b>Process</b>	<b>Removal Rate (A/min)</b>			
		<b>Cu</b>	<b>WIWN U%</b>	<b>TaN</b>	<b>WIWNU %</b>
<b>Process 3(A)</b>					
40% of Abrasive B	5/0/90/90	6904	8.2%	N/A	N/A
60% of Oxidizer C					
<b>Process 3(B)</b>					
40% of Abrasive B	3/0/75/75	3123	14.6%	240	16.7%
60% of Oxidizer C					

[0064] Process 3(A) above is performed by applying 5psi down force pressure, 0 psi back pressure, 90 rpm table speed (22.5 inch diameter) and 90 rpm carrier speed (8 inch diameter). The slurry 3 composition, when employed according to the above first process, provides a copper within-wafer-nonuniformity (WIWNU%) of approximately 8.2%.

[0065] Process 3(B) above is performed by applying 3psi down force pressure, 0 psi back pressure, 75 rpm table speed (22.5 inch diameter) and 75 rpm carrier speed (8 inch diameter). The Slurry 3 Composition, when employed according to the above second process, provides a Cu:TaN selectivity of approximately 13.0 and a copper within-wafer-nonuniformity (WIWNU%) of 14.6%.



Cu Slurry Composition ("Slurry 4 Composition")

[0066] Other embodiments of the present invention include Oxidizer C, Abrasive B, diluted with DI water and mixed to form a Slurry 4 Composition. In one example, and according to some embodiments of the present invention, the mixing ratio, process and removal rate data for the Slurry 4 Composition is shown in Table 4.

**Table 4**

Slurry 4 Composition: Mixing Ratio, Process and Removal Rate

Mixing Ratio	Process	Removal Rate (A/min)			
		Cu	WIWN U%	TaN	WIWNU %
<b>Process 4(A)</b>					
25% of Abrasive B, 50% of Oxidizer C and 25% DI water	5/0/90/90	6539	5.5%	N/A	N/A
<b>Process 4(B)</b>					
25% of Abrasive B, 50% of Oxidizer C and 25% DI water	2/0/70/90	2243	8.6%	171	14.3%

[0067] Process 4(A) above is performed by applying 5 psi down force pressure, 0 psi back pressure, 90 rpm table speed (22.5 in diameter) and 90 rpm carrier speed (8 in diameter). The Slurry 4 Composition, when employed according to Process 4(A), provides a copper within-wafer-nonuniformity (WIWNU%) of 5.47%.

[0068] Process 4(B) above is performed by applying 2 psi down force pressure, 0 psi back pressure, 70 rpm table speed (22.5 in diameter) and 90 rpm carrier speed (8 in diameter). The Slurry 4 Composition, when employed according to Process 4(B), provides a Cu:Ta<sub>2</sub>N selectivity of approximately 13.1 and a copper within-wafer-nonuniformity (WIWNU%) of 8.6%.

Copper Slurry Composition ("Slurry 5 Composition")

[0069] Some embodiments of the present invention include an oxidizer ("Oxidizer D"), an Insoluble Complexing Agent (such as 2,4-pentadione dioxime), H<sub>2</sub>SO<sub>4</sub>, an abrasive and DI Water mixed to form the Slurry 5 Composition.

[0070] Concentrations for one example of Slurry 5 Composition are shown in Table 5. The concentration of, *inter alia*, the Insoluble Complexing Agent of the present invention may be changed to alter the resultant slurry. For example, a concentration of 2,4 pentadione dioxime from about 0.05% to about 0.1% by weight was used in the CMP process.

**Table 5**

Slurry 5 Composition Concentrations

Composition	Composition Concentration (Weight Percent)
Oxidizer D	60.0%
2,4-Pentadione Dioxime	0.05%
H <sub>2</sub> SO <sub>4</sub>	1.9%
Abrasive B	20.0%
DI Water	18.05%

pH Range

[0071] The slurry composition has a pH range of about 2.5 to about 3.2.

## CMP Processing and Results for Slurry 5 Composition

[0072] Composition, concentrations and the CMP process parameters can be altered to produce different CMP results. Typically, the CMP process includes covering the surface of the wafer with the slurry and polishing the wafer. Thus, the CMP process is effected by polish time in seconds (“s”), polish pressure (or polish down force (PSI)) (“pp”), polish table speed, RPM (“ts”), spindle speed (carrier speed), RPM (“ss”) and slurry flow in ml/min (“sf”). The CMP results of the process include the mean copper removal rate (MRR) in angstroms per min and the within wafer within-wafer-nonuniformity (%) (WIWNU).

[0073] The result under the column heading “Dia – 58pt” represents 58 points diameter measurement across the whole wafer by DCE Resmap four point probe. The result under the column “Polar-49pt/6mmEE” represents 49 points polar measurement with 6mm edge exclusion by Resmap.

[0074] The CMP process and results for a first example employing the Slurry 5 Composition are shown in the following table.

### **Process 5(A)**

#### CMP Process and Results Utilizing the Slurry 5 Composition (Example 1)

Slurry Composition	CMP Process s/pp/ts/ss/sf	Dia – 58pt		Polar-49pt/6mmEE	
		Mean Removal Rate (Å/min)	Within Wafer Non Uniformity (%)	Mean Removal Rate (Å/min)	Within Wafer Non Uniformity (%)
Slurry Composition 5	60/5/90//90/175	7777	6.2%	7870	4.8%

[0075] Thus, the above Process 5(A) is used with the Slurry 5 Composition and is achieved by using a polish time of 60 seconds, with a polish pressure of 5psi, a polish table speed of 90 RPM, a spindle speed of 90 RPM and a slurry flow of 175 ml/min.

[0076] Process 5(B) below is used with the Slurry 5 Composition and is achieved by using a

polish time of 60 seconds, with a polish pressure of 3psi, a polish table speed of 75 RPM, a spindle speed of 75 RPM and a slurry flow of 175 ml/min.

[0077] The CMP process and results for the second example employing the Slurry 5 Composition are shown in the following table.

**Process 5(B)**

CMP Process and Results Utilizing the Slurry 5 Composition (Example 2)

Slurry Composition	CMP Process s/pp/ts/ss/sf	Dia – 58pt		Polar-49pt/6mmEE	
		Mean Removal Rate (Å/min)	Within Wafer Non Uniformity (%)	Mean Removal Rate (Å/min)	Within Wafer Non Uniformity (%)
Slurry 5	60/3/75//75/175	3910	12.3%	4325	10.4%
Composition					

[0078] Note that the Slurry 5 Composition is advantageous in that it provides a large range of WIWNU (4.8% to 10.4%) to account for process variations.

Copper Slurry Composition (“Slurry 6 Composition”)

[0079] In other embodiments of the present invention, the weight of 2,4-pentadione dioxime is approximately doubled from Slurry 5 to form a Slurry 6 Composition.

[0080] Composition concentrations for one example of the Slurry 6 Composition are shown in Table 6. Good results have been obtained with this particular example containing 0.1% 2,4-pentadione dioxime. It should be noted that the concentration of, *inter alia*, the Insoluble Complexing Agent (2,4-pentadione dioxime) of the present invention may be changed to alter the resultant slurry. Concentrations of 2,4-pentadione dioxime from about 0.05% to about 0.10% by

weight were used in the CMP processes.

**Table 6**

Slurry 6 Composition Concentrations

Composition	Composition Concentration (Approximate Weight Percent)
Oxidizer D	60.0%
2,4-Pentadione Dioxime	0.1%
H <sub>2</sub> SO <sub>4</sub>	1.9%
Abrasive B	20.0%
DI Water	18%

pH Range

[0081] The slurry composition has a preferred pH range from about 2.5 to about 3.2

[0082] The CMP process and results for a first example employing the Slurry 6 Composition are shown in the following table. This process may be altered using the same slurry to acquire different CMP Results.

## Process 6(A)

### CMP Process and Results Utilizing the Slurry 6 Composition (Example 1)

Slurry Composition	CMP Process s/pp/ts/ss/sf	Dia – 58pt		Polar-49pt/6mmEE	
		Removal Rate (Å/min)	Within Wafer Non Uniformity (%)	Removal Rate (Å/min)	Within Wafer Non Uniformity (%)
Slurry 6 Composition	60/5/90//90/175	7878	5.2%	8185	4.7%

[0083] Thus, the above Process 6(A) is used with the Slurry 6 Composition and is achieved by using a polish time of 60 seconds, with a polish pressure of 5psi, a polish table speed of 90 RPM, a spindle speed of 90 RPM and a slurry flow of 175 ml/min.

[0084] A second process example is used with the Slurry 6 Composition and is achieved by using a polish time of 60 seconds, with a polish pressure of 3psi, a polish table speed of 75 RPM, a spindle speed of 75 RPM and a slurry flow of 175 ml/min.

[0085] The CMP process and results for the second example employing the Slurry 6 Composition are shown in the following table.

## Process 6(B)

### CMP Process and Results Utilizing the Slurry 6 Composition (Example 2)

Slurry Composition	CMP Process S/pp/ts/ss/sf	Dia – 58pt		Polar-49pt/6mmEE	
		Removal Rate (Å/min)	Within Wafer Non Uniformity (%)	Removal Rate (Å/min)	Within Wafer Non Uniformity (%)
Slurry 6 Composition	60/3/75//75/175	4434	7.2%	4874	9.8%

### Copper Slurry Composition (“Slurry 7 Composition”)

[0086] Other embodiments of the present invention include Oxidizer D, 1,6-dioxaspiro[4,4]nonane 2,7-dione (a diester that is an Insoluble Complexing Agent), H<sub>2</sub>SO<sub>4</sub>, an abrasive and DI water mixed to form the Slurry 7 Composition.

[0087] As noted above, Oxidizer D composition, according to some embodiments of the present invention, comprises 4% hydroxylamine, 3% hydroxyl ammonium salt and 93% DI water.

[0088] Composition concentrations, for one example, are shown in the Table 7 and it should be noted that the concentration of, *inter alia*, the Insoluble Complexing Agent of the present invention may be changed to alter the resultant slurry. The concentration of Insoluble Complexing Agent 1,6-Dioxaspirol [4,4] nonane 2,7-dione used for etching tests was from about 0.01% to about 0.2% by weight. As used for CMP, the concentration was from about 0.05% to about 0.1%

**Table 7**

Slurry 7 Composition Concentrations

Compositions	Composition Concentrations (Approximate Weight Percent)
Oxidizer D	60.0%
1,6-Dioxaspiro[4.4] nonane 2,7-dione	0.05%
Sulfuric Acid H <sub>2</sub> SO <sub>4</sub>	1.9%
Abrasive	20.0
DI Water	18.05%

pH Range

[0089] The slurry composition has a pH range from about 2.7 to about 3.5.

[0090] The CMP process and results for a first example employing the Slurry 7 Composition are shown in the following table.



## Process 7(A)

### CMP Process and Results Utilizing the Slurry 7 Composition (Example 1)

Slurry Composition	CMP Process s/pp/ts/ss/sf	Dia – 58pt		Polar-49pt/6mmEE	
		Removal Rate (Å/min)	Within Wafer Non Uniformity (%)	Removal Rate (Å/min)	Within Wafer Non Uniformity (%)
Slurry 7 Composition	60/5/90//90/175	6192	6.5%	6171	4.1%

[0091] Thus, the above process is used with the Slurry 7 Composition and is achieved by using a polish time of 60 seconds, with a polish pressure of 5psi, a polish table speed of 90 RPM, a spindle speed of 90 RPM and a slurry flow of 175 ml/min.

[0092] A second process example is used with the Slurry 7 Composition and is achieved by using a polish time of 60 seconds, with a polish pressure of 3psi, a polish table speed of 75 RPM, a spindle speed of 75 RPM and a slurry flow of 175 ml/min.

[0093] The CMP process and results for the second example employing the Slurry-7 Composition are shown in the following table.

## Process 7(B)

### CMP Process and Results Utilizing the Slurry 7 Composition (Example 2)

Slurry Composition	CMP Process s/pp/ts/ss/sf	Dia – 58pt		Polar-49pt/6mmEE	
		Mean Removal Rate (Å/min)	Within Wafer Non Uniformity (%)	Mean Removal Rate (Å/min)	Within Wafer Non Uniformity (%)
Slurry 7 Composition	60/3/75//75/175	2822	4.5%	2891	5.4%

### Copper Slurry Composition (“Slurry 8 Composition”)

[0094] In other embodiments of the present invention, the weight percent of 1,6-Dioxaspiro[4.4] nonane 2,7-dione (an Insoluble Complexing Agent) is approximately doubled from that of Slurry 7.

[0095] Composition concentrations for one example of the Slurry 8 Composition are shown in the following table and is should be noted that the concentration of, *inter alia*, the Insoluble Complexing Agent of the present invention may be changed to alter the resultant slurry. The concentration of Insoluble Complexing Agent 1,6-Dioxaspirol [4,4] nonane 2,7-dione used for etching tests was from about 0.01% to about 0.2% by weight. As used for CMP, the concentration was from about 0.05% to about 0.1%

**Table 8**

Slurry 8 Composition Concentrations

<b>Composition</b>	<b>Composition D Concentration (Approximate Weight Percent)</b>
Oxidizer D	60.0%
1,6-Dioxaspiro[4,4] nonane 2,7-dione	0.10%
Sulfuric Acid H <sub>2</sub> SO <sub>4</sub>	2.0%
Abrasive	20.0
DI Water	18%

pH Range

[0096] The slurry composition has a preferred pH range from about 2.7 to about 3.7.

[0097] The CMP process and results for a first example employing the Slurry 8 Composition are shown in the following table. This process may be altered using the same slurry to acquire different CMP Results.

**Process 8(A)**

CMP Process and Results Utilizing the Slurry 8 Composition (Example 1)

<b>Slurry Composition</b>	<b>CMP Process s/pp/ts/ss/sf</b>	<b>Dia – 58pt</b>		<b>Polar-49pt/6mmEE</b>	
		<b>Mean Removal Rate (Å/min)</b>	<b>Within Wafer Non Uniformity (%)</b>	<b>Mean Removal Rate (Å/min)</b>	<b>Within Wafer Non Uniformity (%)</b>
Slurry Composition 8	60/5/90//90/175	4654	6.2%	4545	5.2%

[0098] Thus, the above process is used with the Slurry 8 Composition and is achieved by using a polish time of 60 seconds, with a polish pressure of 5psi, a polish table speed of 90 RPM, a

spindle speed of 90 RPM and a slurry flow of 175 ml/min.

[0099] A second process example is used with the Slurry 8 Composition and is achieved by using a polish time of 60 seconds, with a polish pressure of 3psi, a polish table speed of 75 RPM, a spindle speed of 75 RPM and a slurry flow of 175 ml/min.

[00100] The CMP process and results for the second example employing the Slurry 8 Composition are shown in the following table.

### Process 8(B)

#### CMP Process and Results Utilizing the Slurry 8 Composition (Example 2)

Slurry Composition	CMP Process s/pp/ts/ss/sf	Dia – 58pt		Polar-49pt/6mmEE	
		Removal Rate (Å/min)	Within Wafer Non Uniformity (%)	Removal Rate (Å/min)	Within Wafer Non Uniformity (%)
Slurry 8 Composition	60/3/75//75/175	2308	5.2%	2331	8.8%

#### Oxidizers Comprising Citric and/or Sulfuric acid

[00101] As mentioned above, the oxidizers in accordance with the present invention may further include sulfuric and/or citric acid.

[00102] Sulfuric acid provides a way of modifying the pH of the oxidizer to be acidic, resulting in the hydroxylamines being oxidizers.

[00103] Citric acid works as a complexing agent for copper for helping to retain copper in a complex form (i.e., in a copper I or copper II state) so as to preclude copper from redepositing or

coming out of solution because of other secondary chemical reactions.

### Copper CMP Slurry Compositions Comprising Oxidizer E

[00104] Some embodiments of the present invention include slurry compositions comprised of Oxidizer E and Abrasive B. The Table 9 delineates five specific examples of slurry compositions in accordance with some embodiments of the present invention and further delineates composition concentrations (mixing ratios), process and removal rate data for each of the five respective examples (Examples 1 through 5). In Table 9, "RR" is the "Removal Rate" in angstroms per minute. Good results have been obtained with Example 3.

**Table 9**

### CMP Mixing Ratios, Processes and Results

Slurry Composition Examples 1 through 5	Cu RR		TaN RR
	CMP Process	CMP Process	CMP Process
	(A)	(B)	(C)
	s/pp/ts/ss/sf	s/pp/ts/ss/sf	s/pp/ts/ss/sf
	5/2/90/90	3/2/75/75	3/2/75/75
1) 60% of Oxidizer E, 20% of Abrasive B, and 20% DI water	7867	4785	195
2) 60% of Oxidizer E, 20% of Abrasive B, 0.5% NH <sub>2</sub> NH <sub>2</sub> and 19.5% DI water (pH approximately 3)	4648	2557	182
3) 60% of Oxidizer E, 20% of Abrasive B, 0.25% NH <sub>2</sub> NH <sub>2</sub> and 19.75% DI water (pH approximately 3)	6001	3444	193
4) 30% of CMP 9011, 20% of Abrasive B, 0.5% of H <sub>2</sub> O <sub>2</sub> 5% Benzotriazole (@ 0.2% solution) and 44.5% DI water	586	183	185
5) 4.8% Hydroxylamine (@ 50% solution), 3.0% Hydroxylamine Sulfate (solid), 5.0% NH <sub>2</sub> NH <sub>2</sub> , 4.2% H <sub>2</sub> SO <sub>4</sub> , 20% of Abrasive B, and 63.0% DI water	7028	3833	179

The CMP 9011 listed in Table 9 is composed of the following components: Hydroxylamine Nitrate (@ 82% solution) 1.23%; 0.2% Aqueous BTA 8%; Nitric Acid 0.006%; and DI Water 90.764%.

[00105] Figure 1 shows a graph of the removal rates ("RR", in angstroms per minute) for each of the three processes A, B, C, associated with each of the five examples. Specifically, Figure 1 shows five bar graph groups each comprised of three abutting removal rate bar graphs. The five bar graph groups show the five examples from left to right, with the first example starting on the left and the fifth example ending on the right. Each of the abutting bar graphs in each of the five bar graph groups (from left to right in figure 1) respectively represents the removal rate for each of the three processes (from left to right in the above table).

[00106] In further embodiments, the present invention includes slurry compositions comprising Oxidizer E. Table 10 delineates static etching rate (in angstroms per minute) at room temperature for eight specific examples of slurry compositions in accordance with some embodiments of the present invention and further delineates composition concentrations (mixing ratios) for the eight respective examples.

**Table 10**

Static Etching Rate For Phase I Copper CMP Slurry Compositions

+ (-) etch rate indicates removal (deposit) of material.

<b>Slurry Composition</b> <b>(DI water is added to balance each slurry composition to equal a total of 100 Weight Percent)</b>	<b>Copper Removal Rate</b>
1) 60% of Oxidizer E, 10% of Abrasive B	50.6
2) 60% of Oxidizer E, 20% of Abrasive B	84.5
3) 60 % of Oxidizer E, 20% of Abrasive B, 1.0% NH <sub>2</sub> NH <sub>2</sub> (pH approximately 3)	7
4) 60 % of Oxidizer E, 20% of Abrasive B, 0.5% NH <sub>2</sub> NH <sub>2</sub> (pH approximately 3)	45
5) 20% of Abrasive B, 0.6% H <sub>2</sub> O <sub>2</sub> , 30% of a solution ("Solution A") comprised of: 90.764% DI water, 1.23% HAN at 82%, 8% Benzotriazole (@ 0.2% solution), 0.006% Nitric Acid and having a pH of about 2.3 to about 2.7	55.5
6) 20% of Abrasive B, 0.6% H <sub>2</sub> O <sub>2</sub> , 5% Benzotriazole (@ 0.2% solution) and 30% of Solution A	0
7) 0.6% of H <sub>2</sub> O <sub>2</sub> , 20% of Abrasive B, 5% Benzotriazole (@ 0.2% solution) and 30% of Solution A	0
8) 60 % of Oxidizer E, 30% of Abrasive B	85.4

**Copper CMP Slurry Compositions Comprising Oxidizer F**

**[00107]** In further embodiments, the present invention includes slurry compositions including Oxidizer F. The following table delineates fourteen specific examples of slurry compositions in accordance with some embodiments of the present invention and further delineates composition concentrations (mixing ratios), some comparison etch rate data between using a DI water for the

balance of the slurry verses using Abrasive B.

Copper CMP Slurry Composition ("Slurry 9 Composition")

[00108] In another embodiment, the present invention is comprised of Oxidizer F and Abrasive B mixed to form a Slurry 9 Composition. In one example, and according to some embodiments of the present invention, the mixing ratio, process, removal rate data, and the static etch rate for the Slurry 9 Composition is shown in Table 11.



**Table 11**

Slurry 9 Composition: Mixing Ratio, Process and Removal Rate

Slurry 9 Composition (DI water is added to balance each slurry composition to equal a total of 100 Weight Percent)	Process (A) 5/0/90/90		Process (B) 3/0/75/75		Static Etching Rate (C)
	Cu Removal Rate (A/min)	WIWN U%	Cu Removal Rate (A/min)	TaN Removal Rate (A/min)	Removal Rate (A/min) @ 130 Degrees Fahrenheit
3.0% Hydroxylamine Sulfate (solid) (HAS); 4.8% Hydroxylamine (@ 50% solution) (HDA); 4.2% Sulfuric acid H <sub>2</sub> SO <sub>4</sub> (@ 95-98% acid); 0.2% Hydrazine (99%) (NH <sub>2</sub> NH <sub>2</sub> );	9112	3.2%	4235	200	178
0.03% 4-hydrazine benzoic acid (solid) (HBA); 20% of Abrasive B (pH approximately 3)					

[00109] Process(A) in Table 11 with respect to the Slurry 9 Composition is achieved by applying 5 psi down force pressure, 0 psi back pressure, 90 rpm table speed (22.5 inch diameter) and 90 rpm carrier speed (8 inch diameter). The Slurry 9 Composition, when employed according to the above first process, provides a copper removal rate of 9112 angstroms per minute and a copper within-wafer-nonuniformity (WIWNU%) of approximately 3.2%.

[00110] Process(B) in Table 11 with respect to the Slurry 9 Composition is achieved by applying 3 psi down force pressure, 0 psi back pressure, 75 rpm table speed (22.5 inch diameter) and 75 rpm carrier speed (8 inch diameter). The Slurry 9 Composition, when employed

according to the above second process, provides a Cu:TaN selectivity of approximately 21.2.

[00111] That static etch rate for the Slurry 9 Composition is 178 angstroms per minute.

Copper CMP Slurry Compositions Comprising Oxidizer G

[00112] In further embodiments, the present invention includes slurry compositions comprised of Oxidizer G. Tables 12, 13 and 14 delineate further specific examples of slurry compositions in accordance with the present invention and further delineate composition concentrations (mixing ratios), processes, removal rate data, and the static etch rates.

**Table 12**

Slurry 10 Composition (DI water is added to balance each slurry composition to equal a total of 100 Weight Percent)	Process(A) 5/0/90/90		Process(B) 3/0/75/75		Static Etching Rate(C)
	Cu Removal Rate (A/min)	WIWN U%	Cu Removal Rate (A/min)	TaN Removal Rate (A/min)	Removal Rate (A/min) @ 130 Degrees Fahrenheit
2.4% Hydroxylamine Sulfate (solid) (HAS); 5.6% Hydroxylamine (@ 50% solution) (HDA); 3.2% Sulfuric acid H <sub>2</sub> SO <sub>4</sub> (@ 95-98% acid); 0.06% Hydrazine (99%) (NH <sub>2</sub> NH <sub>2</sub> ); 0.032% 4-hydrazine benzoic acid (solid) (HBA); 1.5% CR-30; and 1% CR-140 (pH approximately 2)	8559	2.9%	4642	124	113

CR-30 and CR-140 are milled alumina products manufactured by Baikowski Chimie Co. of Annecy Cedex 9, France. The numerical designation correlates with the particle size, larger numerical designations having generally smaller particles than smaller numerical designations. That is, particles sizes are typically in the order CR-140 < CR-85 < CR-30.

**Table 13**

Slurry 11 Composition (DI water is added to balance each slurry composition to equal a total of 100 Weight Percent)	Process(A) 5/0/90/90		Process(B) 3/0/75/75		Static Etching Rate(C)
	Cu Removal Rate (A/min)	WIWN U%	Cu Removal Rate (A/min)	TaN Removal Rate (A/min)	Removal Rate (A/min) @ 130 Degrees Fahrenheit
2.4% Hydroxylamine Sulfate (solid) (HAS); 5.6% Hydroxylamine (@ 50% solution) (HDA); 3.2% Sulfuric acid H <sub>2</sub> SO <sub>4</sub> (@ 95-98% acid); 0.1% Hydrazine (99%) (NH <sub>2</sub> NH <sub>2</sub> ); 0.032% 4-hydrazine benzoic acid (solid) (HBA); 1.5% CR-30; and 1% CR-140 (pH approximately 2)	8893	3.9%	3000	123	200

Table 14

Slurry 12 Composition (DI water is added to balance each slurry composition to equal a total of 100 Weight Percent)	Process(A) 5/0/90/90		Process(B) 3/0/75/75		Static Etching Rate(C)
	Cu Removal Rate (A/min)	WIWN U%	Cu Removal Rate (A/min)	TaN Removal Rate (A/min)	Removal Rate (A/min) @ 130 Degrees Fahrenheit
2.1% Hydroxylamine Sulfate (solid) (HAS); 4.2% Hydroxylamine (@ 50% solution) (HDA); 3.85% Sulfuric acid H <sub>2</sub> SO <sub>4</sub> (@ 95-98% acid); 0.07% Hydrazine (99%) (NH <sub>2</sub> NH <sub>2</sub> ); 0.032% 4-hydrazine benzoic acid (solid) (HBA); 2.1% CR-30; and 2% CR-140 (pH approximately 2)	8590	4.6%	4600	130	189

[00113] Having described the invention in detail, those skilled in the art will appreciate that, given the present disclosure, modifications may be made to the invention without departing from the spirit of the inventive concept described herein. Therefore, it is not intended that the scope of the invention be limited to the specific embodiments illustrated and described.



## ATTACHMENT A

Material Safety Data Sheet for

MICROPLANAR™ CMP9000™

sold by EKC Technology, Inc. of Hayward, CA

100494-100494



# Material Safety Data Sheet

## 1. PRODUCT AND COMPANY IDENTIFICATION

Product Identifier:  
General Use:  
Product Description:

MICROPLANAR™ CMP9000™  
Metal CMP  
Slurry

MANUFACTURER:  
EKC Technology, Inc.  
2520 Barrington Court  
Hayward, CA 94545  
(510) 784-9105

EMERGENCY PHONE NUMBERS:  
(800) 424-9300  
CHEMTREC  
24 Hours/day, 7 days/week

## 2. COMPOSITION / INFORMATION ON INGREDIENTS

Colloidal Silica	<u>WT.%</u> 30-35	<u>CAS Registry #</u> Trade Secret	
EXPOSURE LIMITS 8 hrs. TWA (mg/m3)			
	<u>OSHA PEL</u>	<u>ACGIH TLV</u>	<u>OTHER</u>
Colloidal Silica	2.67	10	None

## 3. HAZARDS IDENTIFICATION

### EMERGENCY OVERVIEW

Translucent white slurry  
May cause eye, skin, and respiratory tract irritation

### POTENTIAL HEALTH EFFECTS

#### INHALATION

No adverse effects known.

#### EYE CONTACT

May cause irritation with temporary discomfort, mild redness, and dryness.

#### SKIN CONTACT

May cause irritation and dryness.

#### INGESTION

No adverse effects known.

#### TARGET ORGANS

Skin, eyes

#### MEDICAL CONDITIONS AGGRAVATED BY EXPOSURE

Overexposure may aggravate existing respiratory or skin conditions.

#### CARCINOGENICITY

National Toxicology Program (NTP): Not listed



EKC Technology, Inc.  
A ChemFirst Company

2520 Barrington Court  
Hayward, CA 94545  
tel. +1 510 784-9105  
facs. +1 510 784-9181

Name: MICROPLANAR™ CMP9000™

Revision New- Prepared May 13, 1999

Page 2 of 5

IARC Monographs:

Not listed

OSHA:

Not listed

ACGIH:

Not listed

#### 4. FIRST AID MEASURES

##### INHALATION

Remove to fresh air. If not breathing, give artificial respiration. If breathing is difficult, give oxygen. Consult a physician.

##### EYE CONTACT

Flush eyes with water. If redness and irritation persist, contact a physician.

##### SKIN CONTACT

Flush skin with water. If redness and irritation persist, contact a physician.

##### INGESTION

Do not induce vomiting. Never give anything by mouth to an unconscious person. Consult a physician.

##### NOTE TO PHYSICIAN

Treat symptomatically as required by the condition of the patient.

#### 5. FIRE FIGHTING MEASURES

Flashpoint:

Not flammable

Method:

None

Flammable Limits in Air  
% by volume

Lower: None  
Upper: None

Autoignition Temperature:

Not available

Extinguishing Media:

Material is not flammable.

##### UNUSUAL FIRE AND EXPLOSION HAZARDS

None known.

##### FIRE FIGHTING INSTRUCTIONS

Use water spray to cool containers and fire exposed surfaces. Shut off fuel to fire if possible to do so without hazard.

##### FIRE FIGHTING EQUIPMENT

Standard fire-fighting bunker gear.

##### HAZARDOUS COMBUSTION PRODUCTS

None known

#### 6. ACCIDENTAL RELEASE MEASURES

##### SPILL OR LEAK PROCEDURES

If material becomes dry, wet before removal. Contain spill with absorbent material. Transfer absorbent and other contaminated materials to a UN approved covered container for disposal. Consult with Federal, State, and local regulatory agencies to determine acceptable clean-up level. Comply with Federal, State, and local regulations on reporting releases.

#### 7. HANDLING AND STORAGE

##### STORAGE TEMPERATURE

Storage in a cool, dry, well-ventilated area at 40° - 90°F (5° - 32°C) is recommended.

Name: MICROPLANAR™ CMP9000™

Revision New- Prepared May 13, 1999

Page 3 of 5

GENERAL

Keep in original closed containers.  
Prevent skin and eye contact.  
Thorough showering at the end of the work shift is strongly recommended.  
Work clothes should be laundered daily.

8. EXPOSURE CONTROLS / PERSONAL PROTECTION

PERSONAL PROTECTION

RESPIRATORY PROTECTION

No respiratory protection is normally required. However, if material becomes dry and dust is present, use a NIOSH approved dust respirator

PROTECTIVE CLOTHING

Prevent skin contact. Use rubber or latex gloves.

EYE/FACE PROTECTION

Use safety glasses or chemical goggles.

9. PHYSICAL AND CHEMICAL PROPERTIES

Vapor Pressure:	Not available	Freezing Point:	32°F (0°C)
Vapor Density:	Not available	Appearance:	White
Specific Gravity:	1.2-1.3	Boiling Point:	212°F (0°C)
Evaporation Rate:	Not available	Odor:	None
Sciubility in Water:	None	Physical State:	Liquid dispersion
pH:	4-9		

10. STABILITY AND REACTIVITY

GENERAL

This product is stable at normal temperatures and conditions of storage.

INCOMPATIBLE MATERIALS AND CONDITIONS TO AVOID

Freezing.

HAZARDOUS DECOMPOSITION

None known.

HAZARDOUS POLYMERIZATION

Will not normally occur.



Name: MICROPLANAR™ CMP9000™

Revision New- Prepared May 13, 1999

Page 4 of 5

11. TOXICOLOGICAL INFORMATION

INHALATION

No additional information available.

EYE CONTACT

No additional information available.

SKIN CONTACT

No additional information available.

INGESTION

LD<sub>50</sub>, rat: 3160 mg/kg, practically non-toxic.

GENOTOXICITY

No information available.

TARGET ORGANS

Skin, eyes, lungs.

12. ECOLOGICAL INFORMATION

FATE

No information available.

AQUATIC TOXICITY

No information available.

13. DISPOSAL CONSIDERATIONS

DISPOSAL METHODS

Consult 40 CFR, Parts 261 and 268, State, and local regulations for guidance on disposal of this product. Incineration at a facility with proper Federal and State issued permits is the recommended method for disposal.

CONTAINER DISPOSAL

Empty containers retain product residue. Observe all hazard precautions. Keep away from heat, sparks, and flames. Do not distribute, make available, or reuse empty containers except for storage and shipment of original product. Remove all hazardous product residue, and puncture or otherwise destroy empty containers before disposal. Consult 40 CFR, Parts 261 and 268 for guidance on disposal.

14. TRANSPORT INFORMATION

DOT/IMO/ICAO/IATA

Proper shipping name Not Regulated

15. REGULATORY INFORMATION

TSCA (TOXIC SUBSTANCE CONTROL ACT)

Components of this product are listed on the TSCA Inventory.

Name: MICROPLANAR™ CMP9000™

Revision New- Prepared May 13, 1999

Page 5 of 5

SARA TITLE III (SUPERFUND AMENDMENTS AND REAUTHORIZATION ACT)

311/312 Hazard Categories  
313

None

This product is not subject to the reporting requirements of Section 313 of the Emergency Planning and Community Right-To-Know Act of 1986 and of 40 CFR 372.

CERCLA (COMPREHENSIVE RESPONSE COMPENSATION AND LIABILITY ACT)

Reportable Quantity (RQ):

None

We recommend you contact local authorities to determine if there may be other local reporting requirements.

16. OTHER INFORMATION

Exposure to Microplanar™ CMP9000™ should be kept to the lowest level possible. This material is for industrial use. Use only under the supervision of a technically qualified individual.

LABEL INFORMATION

NFPA CODES

Health	1
Fire	0
Reactivity	0
Specific Hazard	None

REVISION SUMMARY

Rev. New

Prepared by: Steven C. Dawson, CIH  
Manager, Industrial Hygiene & Health

The information included in this document is taken from sources, or based on data believed to be reliable and given in good faith. No warranty is made, however, as to the absolute correctness of any of this information, or that additional or other measures may not be required under particular conditions. The data in this Material Safety Data Sheet relates only to the specific material designated and does not relate to use in combination with any other material or in any process. Please refer to the OSHA Hazard Communication Standard 29 CFR 1910.1200 for guidance in the use of this information.



## ATTACHMENT B

Material Safety Data Sheet for

MICROPLANAR™ CMP9001™

sold by EKC Technology, Inc. of Hayward, CA

FOR THE FOOT



## 1. PRODUCT AND COMPANY IDENTIFICATION

Product Identifier:  
General Use:  
Product Description:

**MICROPLANAR™ CMP9001™**  
Tungsten CMP  
Aqueous Alumina Slurry

**MANUFACTURER:**  
EKC Technology, Inc.  
2520 Barrington Court  
Hayward, CA 94545  
(510) 784-9105

**EMERGENCY PHONE NUMBERS:**  
(800) 424-9300  
CHEMTREC  
24 Hours/day, 7 days/week

## 2. COMPOSITION / INFORMATION ON INGREDIENTS

Alumina	<u>WT.%</u>	<u>CAS Registry #</u>	
	Proprietary	Trade Secret	
EXPOSURE LIMITS 8 hrs. TWA (mg/m <sup>3</sup> )			
	<u>OSHA PEL</u>	<u>ACGIH TLV</u>	<u>DFG MAK</u>
Alumina	15	10	6

## 3. HAZARDS IDENTIFICATION

### EMERGENCY OVERVIEW

Milky white suspension with no odor. May cause eye irritation and drying of the skin.

### POTENTIAL HEALTH EFFECTS

#### INHALATION

No adverse effects known.

#### EYE CONTACT

May cause irritation.

#### SKIN CONTACT

May cause drying of the skin.

#### INGESTION

Not expected to be a hazard by this route.

#### TARGET ORGANS

Skin, eyes

#### MEDICAL CONDITIONS AGGRAVATED BY EXPOSURE

Overexposure may aggravate existing skin conditions.

#### CARCINOGENICITY

National Toxicology Program (NTP):

Not listed

IARC Monographs:

Not listed

OSHA:

Not listed

ACGIH:

Not listed



**EKC Technology, Inc.**  
A ChemFirst Company

2520 Barrington Court  
Hayward, CA 94545  
tel. +1 510 784-9105  
facs. +1 510 784-9181

**4. FIRST AID MEASURES****INHALATION**

None required.

**EYE CONTACT**

Immediately flush eyes with water. Have eyes examined and treated by a physician.

**SKIN CONTACT**

Flush skin with water. If redness or irritation occurs, seek medical attention.

**INGESTION**

Flush mouth with water. Consult a physician.

**NOTE TO PHYSICIAN**

Treat symptomatically as indicated by the condition of the patient.

**5. FIRE FIGHTING MEASURES**

Flashpoint:

None

Method:

None

Flammable Limits in Air  
% by volume

Lower: None  
Upper: None

Autoignition Temperature:

None

Extinguishing Media:

None required.

**UNUSUAL FIRE AND EXPLOSION HAZARDS**

No special precautions are necessary.

**FIRE FIGHTING INSTRUCTIONS**

Non-flammable

**FIRE FIGHTING EQUIPMENT**

Non-flammable

**HAZARDOUS COMBUSTION PRODUCTS**

None

**6. ACCIDENTAL RELEASE MEASURES****SPILL OR LEAK PROCEDURES**

If material becomes dry, wet before removal. Contain spill with absorbent material. Transfer absorbent and other contaminated materials to a UN approved covered container for disposal. Consult with Federal, State, and local regulatory agencies to determine acceptable clean-up levels. Comply with Federal, State, and local regulations on reporting releases.

**7. HANDLING AND STORAGE****STORAGE TEMPERATURE**

Do not store below 32°F (0°C).

**GENERAL**

Keep in original closed containers.  
Prevent skin and eye contact.  
Thorough showering at the end of the work shift is strongly recommended.  
Work clothes should be laundered daily.

**8. EXPOSURE CONTROLS / PERSONAL PROTECTION****PERSONAL PROTECTION****RESPIRATORY PROTECTION**

No respiratory protection is normally required. However, if material becomes dry and dust is present, use a NIOSH approved dust respirator.

**PROTECTIVE CLOTHING**

Prevent skin contact. Wear chemical resistant gloves.

**EYE/FACE PROTECTION**

Use safety glasses or chemical goggles.

**9. PHYSICAL AND CHEMICAL PROPERTIES**

Vapor Pressure:	Not available	pH:	8
Vapor Density:	>1 (Air = 1)	Appearance:	Milky-white
Specific Gravity:	1.13 @ 25°C	Boiling Point:	212°F (100°C)
Evaporation Rate:	Not available	Odor:	None
Solubility in Water:	Insoluble solids	Physical State:	Slurry

**10. STABILITY AND REACTIVITY****GENERAL**

This product is stable at normal temperatures and conditions of storage.

**INCOMPATIBLE MATERIALS AND CONDITIONS TO AVOID**

None have been identified.

**HAZARDOUS DECOMPOSITION**

None

**HAZARDOUS POLYMERIZATION**

Will not normally occur.

**11. TOXICOLOGICAL INFORMATION****DATA FOR MICROPLANAR™ CMP9001™****INHALATION**

No information is available.

**EYE CONTACT**

No information is available.

**SKIN CONTACT**

No information is available.

**INGESTION**

No information is available.

**GENOTOXICITY**

No information is available.

**TARGET ORGANS**

Eyes and skin

**12. ECOLOGICAL INFORMATION****DATA FOR MICROPLANAR™ CMP9001™****FATE**

Contains inert mineral product that is insoluble in water and settles easily.

**AQUATIC TOXICITY**

No information is available.

**13. DISPOSAL CONSIDERATIONS****DISPOSAL METHODS**

Consult 40 CFR, Parts 261 and 268, State, and local regulations for guidance on disposal of this product. Incineration at a facility with appropriate permits or authorizations is the recommended method of disposal.

**CONTAINER DISPOSAL**

Empty containers retain product residue. Observe all hazard precautions. Do not distribute, make available, or reuse empty containers except for storage and shipment of original product. Remove all hazardous product residue, and puncture or otherwise destroy empty containers before disposal.

**14. TRANSPORT INFORMATION****IMO/ICAO/IATA**

Proper shipping name	Not regulated
Hazard Class	None
Identification number	None
Packing group	None
Labels required	None
IMDG page number	None

**15. REGULATORY INFORMATION****TSCA (TOXIC SUBSTANCE CONTROL ACT)**

Components of this product are listed on the TSCA Inventory.

We recommend you contact local authorities to determine if there may be other local reporting requirements.

**SARA TITLE III (Superfund Amendments and Reauthorization Act)**

311/312	None
Hazard	
Categories	

313

This product contains no substances that are subject to the reporting requirements of Section 313 of the Emergency Planning and Community Right-To-Know Act of 1986 and of 40 CFR 372.

**CERCLA (Comprehensive Response Compensation and Liability Act)**

Not reportable.

We recommend that you contact local authorities to determine if there may be other local reporting requirements.

**16. OTHER INFORMATION**

Because the long-term human health effects from exposure to MICROPLANAR™ CMP9001™ have not been fully evaluated, exposure should be kept to the lowest level possible.

This material is for industrial use. Use only under the supervision of a technically qualified individual.

**LABEL INFORMATION****NFPA CODES**

Health	1
Fire	0
Reactivity	0
Specific Hazard	None

**REVISION SUMMARY**

Rev. New	Initial MSDS
Prepared by:	Steven C. Dawson, CIH Manager, Industrial Hygiene & Health

The information included in this document is taken from sources, or based on data believed to be reliable and given in good faith. No warranty is made, however, as to the absolute correctness of any of this information, or that additional or other measures may not be required under particular conditions. The data in this Material Safety Data Sheet relates only to the specific material designated and does not relate to use in combination with any other material or in any process.